




YIBTECH FK 1000 / FK 1000D

WALL MOUNTED STAINLESS STEEL , ELECTRONIC SOAP / DISINFECTANT DISPENSER

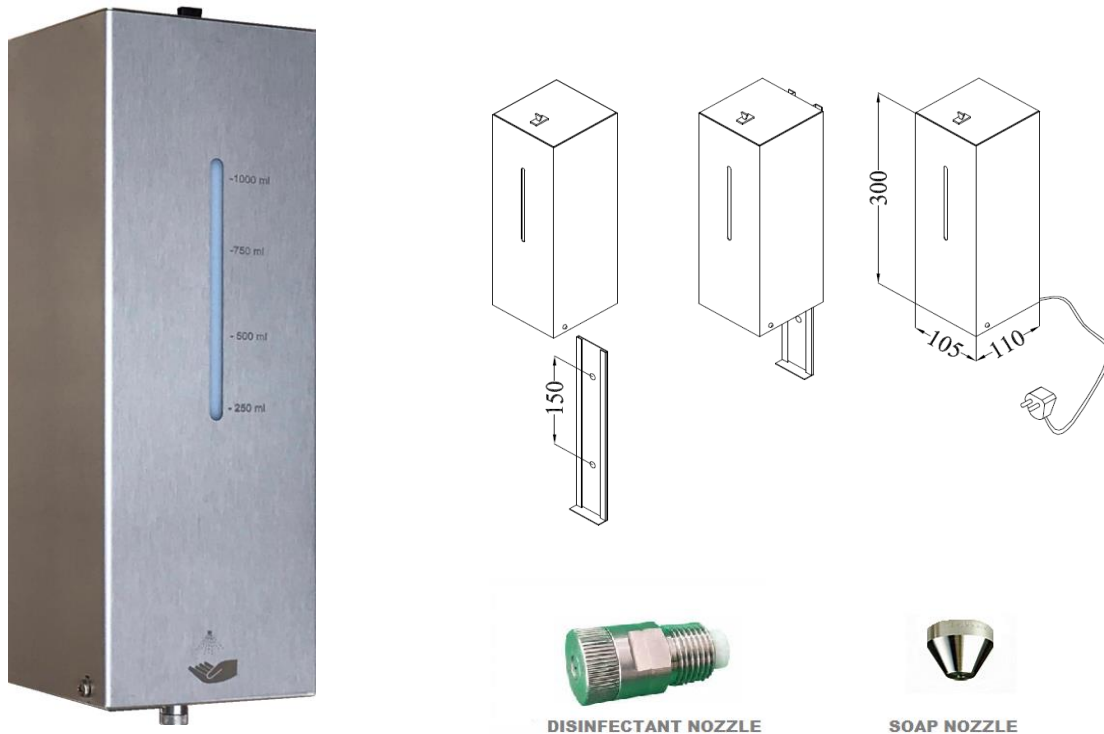

SPECIFICATIONS

AISI 304 stainless steel. 3 Bar fluid pump. Top locking cap.
Fluid is sprayed from bottom, when the hands are detected .
It stops automatically after 1 second of spray.

TECHNICAL INFORMATION

Operates with infrared sensor. Sensor and valve is located at the bottom.
Operates with 24 V / 50 Hz Wall mounted. 1000 mL storage.
Pulverising fine mist nozzles for disinfectant. Straight nozzle for soap.
Dimensions: 160 X 95 X 330h mm

Do not use soap/gel in Disinfectant model !

INSTALLATION


First electricity must be supplied. Mounting rear-plate must be secured to a suitable place and distance with screw and wall plugs. The device must be fixed to the mounting slide .
It is ready for use when plugged to an electric supply. Cable is concealed in the slide.

FIELD OF APPLICATION

Hospitals , Medical Centers , Laboratories , Veterinaries
Food- Catering Facilities , Shopping Malls , Restaurants
Public or private Washrooms , Hotels , Pharmacies , Pharmaceutical and Industrial companies,



YİBTECH FK 1000 / FK 1000D
DUVARA MONTE SABUN VE DEZENFEKTAN DİSPENSERİ

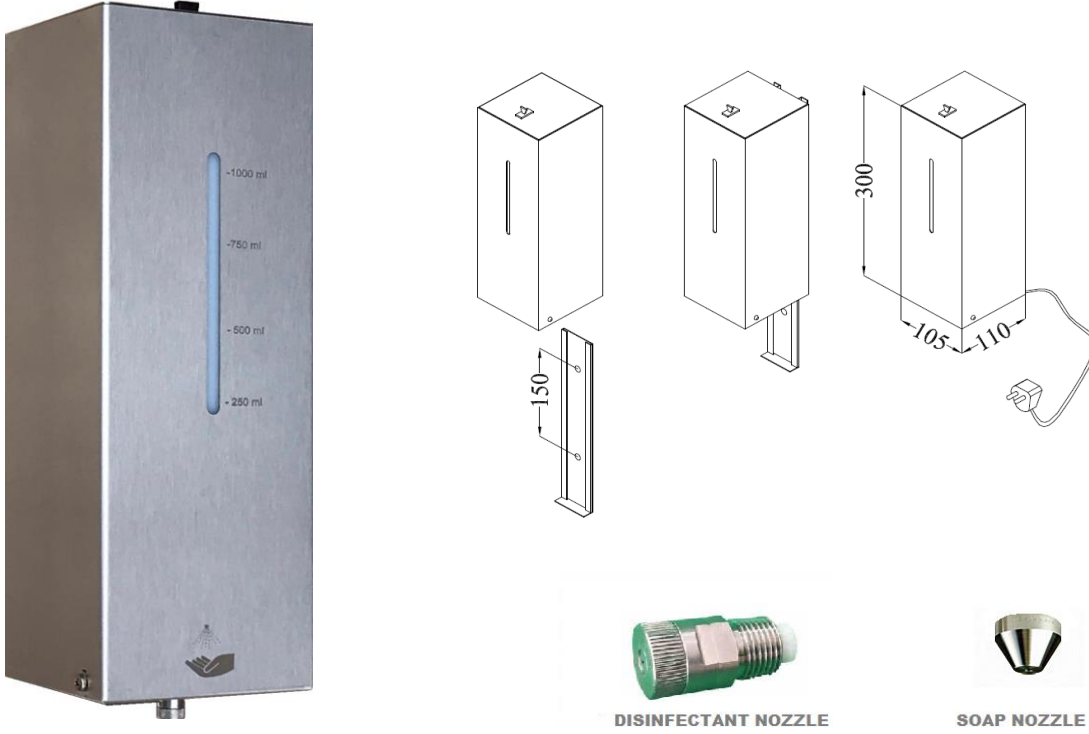

ÖZELLİKLER

AISI 304 paslanmaz çelik gövde. 3 Bar sıvı pompası. Üstten kilitli kapak.
Sıvı dağıtımı alt taraftan yapılır , sensör elleri algıladığında çalışır , 1 saniye çalışır ve durur.
Dezenfektan ve sabun modelleri için farklı fıskiye (nozzle) kullanılır.

TEKNİK BİLGİ

İnfrared sensör kullanır , sensör ve fıskiye cihazın alt tarafındadır.
24 V / 50 Hz elektrik ile çalışır . Duvara veya dikey yüzeye montaj yapılmalıdır.
Sıvı haznesi 1 Litredir. Pulvarize sis fıskiyesi dezenfektan için , düz akım ucu sabun modeli içindir.
Boyutlar : 160 X 95 X 330h mm

Dezenfektan modelinde sabun veya jel kullanılmamalıdır!

MONTAJ VE KULLANIM

Elektrik güç kaynağı hazır bulunmalıdır. Arka montaj plaka rayı uygun bir dik yüzeye vidalanmalıdır.
Kablo gerginliği için mesafe bırakılmalıdır. Cihaz vidalanan raya yukarıdan kaydırılıp sabitlenir.
Güç kablosu fişe takıldığında ve hazne doldurulduğunda kullanıma hazırdır.

KULLANIM ALANLARI

Hastaneler , Sağlık Merkezleri , Laboratuvarlar , Veterinerler
Yemek-Gıda tesisleri , Restoranlar , Alışveriş Merkezleri
Halka Açık Tuvaletler , Oteller , Eczaneler , İlaç Şirketleri